



FEATURES

- Built-in NFC for reading and setting parameters through mobile app
- Real-time monitoring of system condition
- Built-in self test and soft recovery watchdog
- Internal relay failure (IRF) alarm for system abnormalities
- Time-stamp event record of power failure and setting changes up to 120 events.
- Time-stamp record up of to 30 faults and 30 pickups
- Selectable fundamental or true RMS measurement
- Selectable 50 or 60 Hz frequency
- Programmable contact outputs
- Detection of no connection to ZCT
- Incorporated fail-safe feature into trip contact

FEATURE FOR RX330

- ** Self-reclosing feature

SPECIFICATIONS

AUXILIARY SUPPLY

Supply Voltage : 198 ~ 265VAC
 Supply Frequency : 50 or 60Hz
 VA Rating : 3VA max

ACCURACY

Protection Thresholds : -15% to 0%
 whichever is greater
 Time Delay : $\pm 3\%$ or $\pm 40\text{ms}$
 whichever is greater

INPUTS

Remote Reset : N.O. dry contact
 Remote Test : N.O. dry contact

NFC COMMUNICATION

Operation System : Android OS and IOS
 App Name : MikroNFC



OUTPUT CONTACTS

Rated Voltage : 250VAC
 Continuous Carry : 5A ($\cos\phi=1.0$)
 Expected Electrical Life: 10^5 operations
 Expected Mechanical Life : 5×10^6 operations
 No of Output Contact : 3

SETTING RANGES

(i) Earth-Leakage Setting

$I_{\Delta n}$ Sensitivity : 20mA -30.0A,
 *(Variable steps 1)
 Time Δt : INST-10.0s, (Step 0.01s)
 Pre-fault : 10mA -24.0A,
 *(Variable steps 1)

Reset Hysteresis : 2% -10%, (Step 1%)

(ii) Self Reclosing Setting **

Number of Shots : OFF/1 -30 (Step 1)
 Dead Time : 1s -500s (Step 1s)
 Persistent Fault Time : OFF/1s -500s (Step 1s)
 Reclaim Time : OFF/1min -500min
 (Step 1min)

Lockout Self Reset Time: OFF/1h -200h (Step 1h)

EARTH LEAKAGE PROTECTION CLASS

Type A 

INDICATORS

Auxiliary Supply : Green indicator
 Pick-up : Red indicator
 Trip : 7-segment display and Red Indicator
 ZCT Fault : Red indicator
 Reclose Fault : Red indicator**

ENVIRONMENTAL CONDITIONS

Operating Temperature : -10°C to 55°C
 Humidity : 5% to 95%,
 non-condensing

MECHANICAL

Mounting : Panel mounting
 Dimension (mm) : 96(w) x 96(h) x 90(d)
 Enclosure protection : IP54 at the panel
 IP20 at the body
 Approximate weight : 0.5kg


ZERO-PHASE CURRENT TRANSFORMER

To operate with Mikro's ZCT series of current transformer.


* Variable Steps 1: step 1mA (<999mA), step 0.01A (<9.99A), step 0.1A (<30A)

** For RX330 Model Only


TYPICAL APPLICATION DIAGRAM FOR RX300

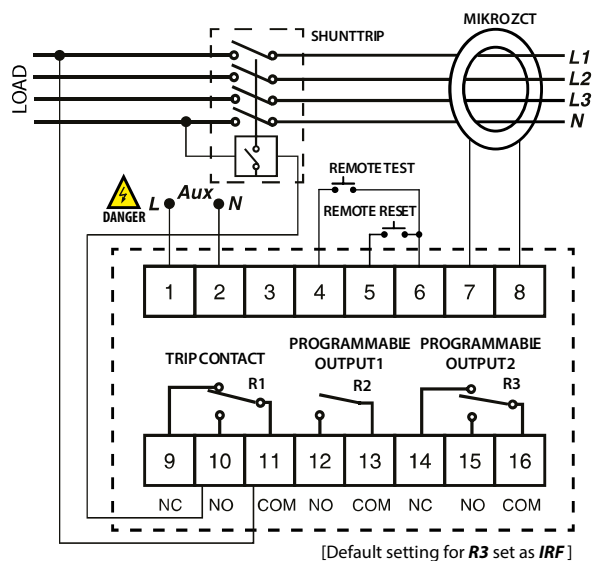

TYPICAL APPLICATION DIAGRAM FOR RX330

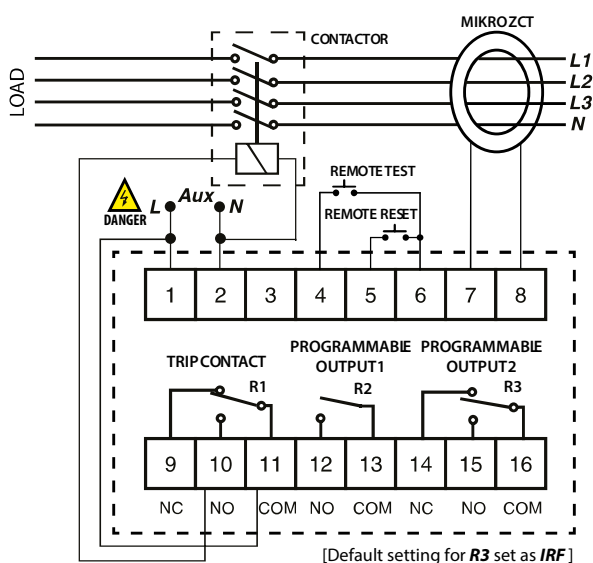


CASE DIMENSION

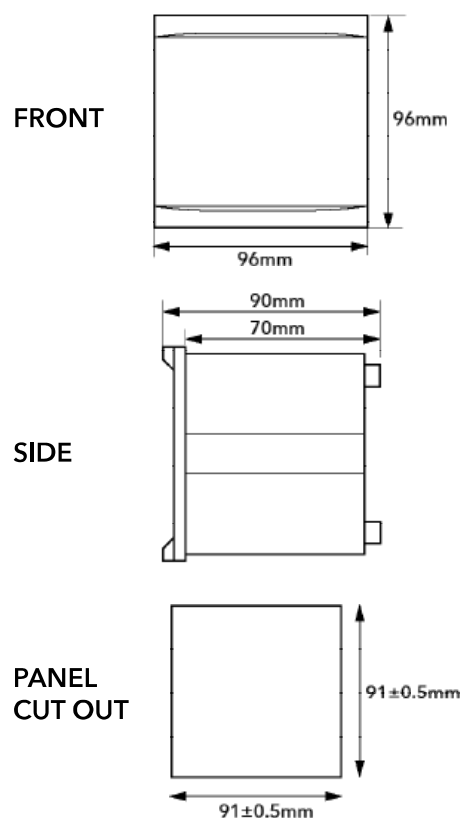

ORDERING INFORMATION

MODEL	DESCRIPTION
RX300-230A	Auxiliary voltage 198 ~ 265VAC, frequency 50 or 60Hz
RX330-230A	Auxiliary voltage 198 ~ 265VAC, frequency 50 or 60Hz

RX300 Earth Leakage Relay User Guide

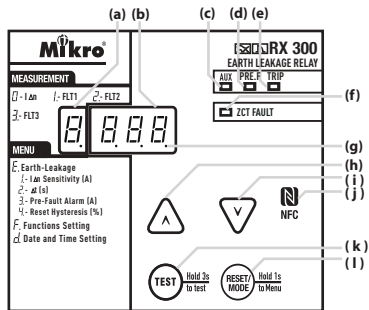


- (a) Function indication
- (b) Data indication
- (c) Auxiliary power supply indicator
- (d) Pre-fault indicator
- (e) Trip status indicator
- (f) ZCT fault indicator
- (g) mA indicator
- (h) Up button
- (i) Down button
- (j) NFC detection area
- (k) Test button
- (l) Reset/Mode button


Features

- Built-in NFC for reading and setting parameters through mobile app
- Real-time monitoring of system condition
- Built-in self test and soft recovery watchdog
- Internal relay failure (IRF) alarm for system abnormalities
- Time stamp event record of power failure and setting changes up to 120 events
- Time-stamp record of up to 30 faults and 30 pickups
- Selectable 50 or 60 Hz frequency
- Selectable fundamental or true RMS measurement
- Programmable Output Contacts
- Detection of no connection to ZCT
- Protected against nuisance tripping
- Remote reset and test function
- Incorporated fail-safe feature into trip contact

Case Dimensions

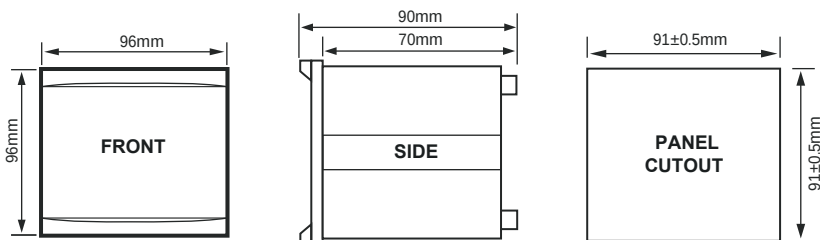

Typical Application Diagram

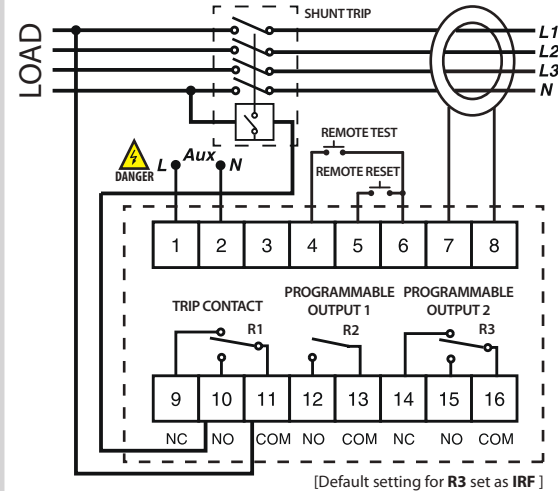

Technical Data

Auxiliary Supply

Supply Voltage..... 198 ~ 265VAC
Supply Frequency..... 50 or 60Hz
VA Rating..... 3VA max

Accuracy

Protection Thresholds..... -15% to 0%
Time Delay..... ±3% with a minimum 40ms

Setting Ranges

(i) Earth-leakage Setting
I_{Δn} Sensitivity..... 20mA - 30.0A
Time Δt..... INST - 10.0s
Pre-fault..... 10mA - 24.0A
Reset Hysteresis..... 2% - 10%

Output Contacts

Rated Voltage..... 250VAC
Continuous Carry..... 5A (Cosφ = 1.0)
Expected Electrical Life..... 10⁵ operations
Expected Mechanical Life..... 5 x 10⁶ operations

Environmental Conditions

Temperature..... -10°C to 55°C
Humidity..... 5% to 95% non-condensing

Mechanical

Mounting..... Panel mounting
Dimension (mm) 96(w) x 96(h) x 90(d)
Enclosure Protection..... IP54 at the panel
IP20 at the body
Approximate Weight..... 0.5kg

Earth Leakage Protection Class

Type A

Zero-Phase Current Transformer

To operate with Mikro's ZCT series of current transformer

NFC Communication




Relay provides NFC communication convenient for user to read parameter values or to change setting through Android phone with NFC feature. The Mikro RX app can be downloaded in the mobile with one of following Methods:

{Make sure phone NFC function is turned on}

- Scan the QR code or align the mobile phone NFC antenna on the NFC logo at relay front panel. This will take you directly to App store.



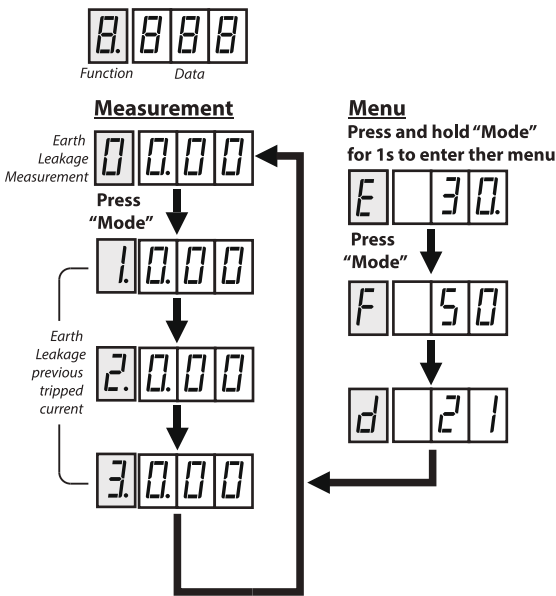

Parameter Settings

E	Earth Leakage Setting
1	I _{Δn} Sensitivity [DEF=0.30]
2	Time Δt [DEF=0.50]
3	Pre-fault [DEF=0.15]
4	Reset Hysteresis [DEF=5]

d	Date and Time Setting
1	Year
2	Month
3	Day
4	Hour
5	Minute
6	Second

[DEF=Default setting]

F	Functions Setting
1	Frequency [50Hz/60Hz] [DEF=50]
2	Measurement display [Fn=Fundamental, RnS=RMS][DEF=rnS]
3	Output R1 reset type [n-A=Manual, AUt=Auto][DEF=AUt]
4	Output R2 reset type [n-A=Manual, AUt=Auto][DEF=n-A]
5	Output R3 reset type [n-A=Manual, AUt=Auto] [DEF=n-A]
6	Fail-safe into trip contact [Yes/No] [DEF=No]
7	Output R2 function [DEF=Alr] [Stc= Safety Contact, Alr= Alarm] *Stc contact function Relay healthy : R2 energized Relay fault : R2 de-energized
8	Output R3 function [DEF=IrF] [IrF= Internal relay failure, Alr=Alarm] *IRF contact function Relay healthy : R3 energized Relay fault : R3 de-energized
9	Output R2 link element [Refer figure 1][DEF=07]
A	Output R3 link element [Refer figure 1][DEF=07]
b	NFC remote set [Yes/No] [DEF=No]

Push Button Operation

Trip Test	Press and hold "TEST" button for 3.5 seconds
Trip Reset	Press "RESET" button
Scroll Display	Press "MODE" button
Enter Menu Mode	Press and hold "MODE" button for 1 second
Set/Save Setting	Press "UP" and "DOWN" buttons simultaneously
Adjust Setting	Press "UP" or "DOWN" button
Display Off Mode	Press "RESET" button for 10 seconds to toggle the display off mode. The display will switch off after 6 minutes if no key is pressed.

LED Indicator

LED Indicator					Status
AUX	PRE.F	TRIP	ZCT	RECLOSE	
0	0	0	0	0	No Auxiliary power supply
1	0	0	0	0	Normal condition, no tripping
1	X	1	X	X	Leakage pickup
1	X	B	X	X	Leakage tripped
1	X	X	B	X	ZCT connection fault alarm
1	B	X	X	X	Pre-fault alarm

1 = ON 0 = OFF B = Blinking X = don't care



Digit1			
User's setting			
User's setting hexadecimal value			

* Not applicable when output R2/R3 function set as Stc or IrF

Digit1			
HEX	CFA	PFA	LFA
00	0	0	0
01	0	0	1
02	0	1	0
03	0	1	1
04	1	0	0
05	1	0	1
06	1	1	0
07	1	1	1

Figure 1:
Link element in
Hexadecimal
value

0= Off,
1= On

LFA - Leakage Fault alarm
PFA - Pre-fault alarm
CFA - ZCT connection fault alarm
PLO - Persistent fault lockout alarm/Transient fault lockout alarm *Only applicable for RX330